


Art.-Nr. (108410 - 06/13)

Instruction to Test Resistor USP <645>

A-85.134.020 Test Resistor Kit for AMI Pharmacon

swan
Analytical Instruments

*SWAN ANALYTISCHE INSTRUMENTE AG, CH-8340 Hinwil
TEL. +41 44 943 63 00, FAX +41 44 943 63 01 e-mail swan@swan.ch*

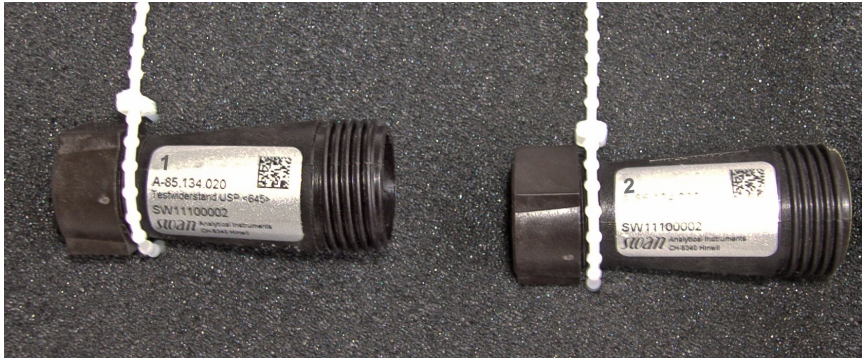

Test Resistor Kit for AMI Pharmacon

Transmitter Test

Use the two high precision test resistors to test the transmitter function.

Test Resistors

Two test plugs. Each consisting of two high precision resistors for conductivity and temperature.

- Test plug 1:
 - 1'500 Ω , $\pm 0.1\%$ for temperature (130.45°C)
 - 600'000 Ω , $\pm 0.01\%$ for conductivity (0.13333 $\mu\text{S}/\text{cm}$)
- Test plug 2:
 - 1'000 Ω , $\pm 0.1\%$ for temperature (0.0°C)
 - 10'000 Ω , $\pm 0.01\%$ for conductivity (8.0 $\mu\text{S}/\text{cm}$)

Note: Keep test resistor kit absolute dry.

Test Procedure

Enter the menu <Maintenance/Transmitter Test> and follow the instructions on the display.

